



DIP TANK INSTRUCTIONS

USING EASISTRIP ONE STEP INK CLEANER & EMULSION REMOVER

STEP 1: ASSEMBLY

- Find the white, plastic on-off spigot that is included with your tank set up (this piece will be included with all dip tanks, except for PT-506 tanks). This should be sealed in a plastic bag and attached to the inner wall of your tank.
- Turn the tank on its side and insert the threaded end of the spigot into the female receptacle located on the bottom end of the tank.
- Be careful to NOT OVER TIGHTEN. Usually 2 or 3 rotations of the spigot are all that is necessary to seal the threads. If the spigot is over tightened, the spin fitting will crack causing the tank to leak. When this is completed turn the tank upright and move it to the location where it will be situated. Generally, you would place the tank within close proximity of the washout booth where the screens will be rinsed.

STEP 2: FILLING THE TANK

- When the tank has been situated you will need to begin filling the tank with water. Avoid adding chemical first and then water second, as it will cause foaming. It is advisable to check the spin fitting/spigot assembly for leaks when the water level reaches that part of the tank.
- When the water level fills 2/3 of the tank, you will then add EasiStrip SUPRA One Step Ink Cleaner & Emulsion Remover.

TANK	VOLUME	TANK DIMENSIONS	CHEMICAL RATIO - USING EASISTRIP	CHEMICAL USING EASISTRIP	WATER USING EASISTRIP
PT-506	14 gallons/ 53 liters	4.5 in x 24 in x 30 in 11.4 cm x 60.9 x 76.2 cm	1:2	5 gallons	Up to 9 gallons
PT-520	37 gallons/ 140 liters	8 in x 30 in x 36 in 20.3 cm x 76.2 x 91.4 cm	1:2	12 gallons	Up to 25 gallons
PT-598	84 gallons/ 318 Liters	18 in x 36 in x 30 in 45.7 cm x 91.4 x 76.2 cm	1:5	28 gallons	Up to 56 gallons
PT-579	105 gallons/ 397 liters	16 in x 40 in x 38 in 40.6 cm x 101.6 x 96.5 cm	1:5	35 gallons	Up to 70 gallons

STEP 3: RECLAIMING SCREENS


After your Easiway Dip Tank is set up and filled with Easiway Ink & Emulsion remover, follow the steps below to begin reclaiming your screens. After finishing the final flood rinse your screen is reclaimed. There is no need to further degrease your screens. Should you have any questions or concerns, or need to re-order, please contact us!

DIP TANK INSTRUCTIONS

USING EASISTRIP ONE STEP INK CLEANER & EMULSION REMOVER



1. SCRAPE INK

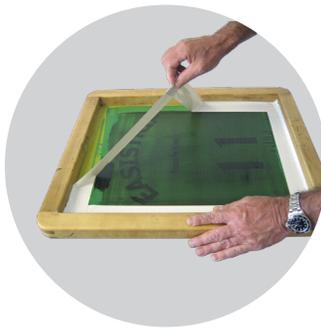

2. PULL TAPE



3. DIP SCREENS

(1-3 MINS OR UNTIL FILM LOOSENS FROM MESH)



4. PRESSURE RINSE




5. SPRAY EASIWAY STAIN REMOVER



6. SCRUB



7. PRESSURE RINSE

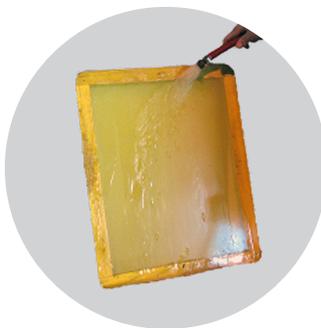

8. FLOOD RINSE SCREEN

After your Easiway Dip Tank is set up and filled with Easiway Ink & Emulsion remover, follow the steps to begin reclaiming your screens. After finishing the final flood rinse your screen is reclaimed. Should you have any questions or concerns, or need to re-order, please contact us!